

Instructions for Model #s. **72593 & 72582**

- 1) Set up pads along side car. Scale pads are marked RF, LR, etc. They are closely matched and can be interchanged if desired.
- 2) Connect cables from control box - note RF, LR, LF, etc. Cables **MUST** be connected to this corner of the car.
- 3) Turn on control box, allow to warm up for a minute or so. Push Zero. This defines "0" weight. **DON'T PUSH 'ZERO' AFTER CAR IS ON SCALES.**
- 4) Lift car and place pads under wheels. For more consistent cross weights "shake" car up & down at each corner to settle out any shock or suspension friction.
- 5) System shuts down after 1 hour to extend battery life. Simply turn back on. **DO NOT REZERO** unless car is off scales.

Shows Low Batt Change Soon

on display when batteries needs replacement (at this point you still have approximately 2 hours of run time). Power consumption is so low that it should not be necessary to replace more than once per season.

- 'AA' battery access is on the inside of the carrying case just behind the control box. Replace with 6 quality AA Alkaline batteries.

BE SURE THE POLARITY IS CORRECT.

There is no recharger or rechargeable batteries since the battery life is so long.

Wheel Weights & Partial % Displays

These 2 buttons let you show either 4 wheel weights and cross - OR - all partial weights and %. You can go back and forth as needed. **Do NOT reZero.**

Base Line Recall


This is a 1 slot memory storage for comparison. To access just push the "Base Line Recall" button.

To store push **Wheel Weights** and **Base Line Recall** buttons at the same time and hold for 3 sec.

There are 2 different displays for both **Wheel Weights** and **Partial %**. See examples at the right. If you want the other one push the **Wheel Weights** or **Partial %** button and hold for 3 seconds (beeps). That display will change and will stay until you change it again.

NOTE: "Bite" is LR minus RR.

longacre
Longacre Racing Products, Inc.
 16892 146th St SE, Monroe, Wa. 98272
 (360) 453 2030
 www.longacracing.com

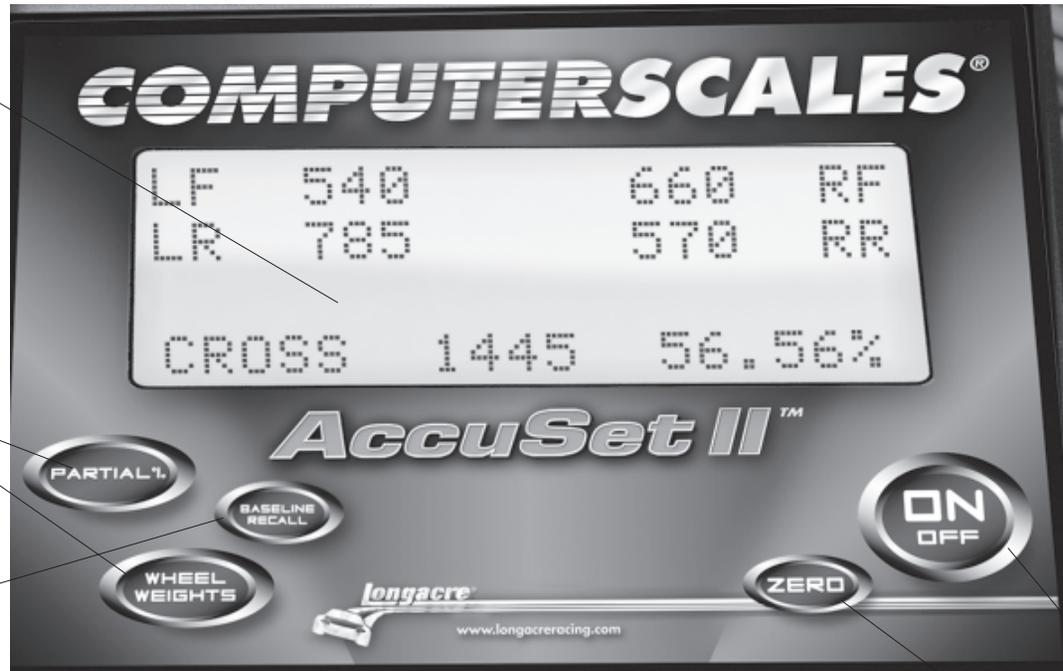

Display shuts off after 90 minutes. If needed simply turn back on. No need to remove car or re-zero.

LF	590	720	RF
LR	685	772	RR
Cross	1546	57.26%	

OR

LF	590	720	RF
LR	685	772	RR
TOTAL	2806		
Cross	1546	57.26%	

LEFT	1436	51.24%
REAR	1531	53.13%
CROSS	1649	57.77%
TOTAL	2806	BITE 157

OR

LEFT	1436	51.23%
RIGHT	1436	51.23%
FRONT	1531	53.61%
REAR	1531	53.19%

General Tips:

- Keep the system clean and dry. Do not drop either the pads or the control box.
- Route the cables so that no one trips and they do not get run over by floor jacks.
- Store in a clean, dry place. Remove batteries if scale will be stored unused for more than 3 months
- Capacity per scale pad is:
 - 1500 lbs. for #72593 (15" pad)
 - 2500 lbs. for #72593 w. #72999 upgraded 15" x 4" tall pads
 - 1100 lbs. for #72582 (12" pad)
 - 400 lbs. for #72624 (kart pad)
- WEIGHT OVER THIS COULD DAMAGE LOAD CELLS and cannot be warranted.
- Keep away from static electricity.

On/Off:

Turn on before putting car on scales. Allow to warm up for a minute or so.

Zero:

Push BEFORE putting car on scales. **DON'T** push Zero AFTER car is on scales. If you do accidentally remove car from scales and re-zero.

NOTE: If service is ever needed please call factory first. You may be able to send back just part of the system, saving freight.